

RAZER shoes are crafted from tempered, tool steel and allow the hoof to flex like a bare foot, while offering the wear protection and traction of a shoe.

## SHOE SELECTION

Razer shoe sizing is similar to Kerckhaerts. If in-between sizes, go with larger size and grind heels to fit.

### RAZER RW (FRONT) SIZE CHART

Size	Width	Length	Circ.
RW 000	4 1/4"	4 7/16"	12 1/8"
RW 00	4 1/2"	4 5/8"	12 5/8"
RW 0	4 3/4"	4 7/8"	13 1/4"
RW 1	5"	5 1/8"	14 1/8"

*(RW typically used on front)*

### RAZER SP (HIND) SIZE CHART

Size	Width	Length	Circ.
SP 000	4 1/4"	4 3/8"	11 7/8"
SP 00	4 9/16"	4 3/4"	12 7/8"
SP 0	4 3/4"	5"	13 3/4"
SP 1	5 1/8"	5 5/16"	14 1/2"
SP 2	5 3/8"	6 3/4"	15 1/4"

*(SP used on QH hind or Standardbred all around)*



## TRIMMING & NAILS

Trim hoof leaving sufficient sole.

4.5 race nail recommended.



## SHAPING & GRINDING

Cold shape only. DO NOT FORGE.

Shape on an avil or stall jack. Easy blows to shape the shoe. Grinding & safining is ok. Can use a torch to apply borium.

Do not over shape, as this can cause stress on the steel and possible lead to breaking.



## FITTING

They can be fit tighter than a normal steel shoe, with very little expansion and length. Shoe will move with hoof capsule.



**VISIT RAZERHORSE.COM FOR APPLICATION VIDEOS  
OR CALL 1-855-95-RAZER FOR QUESTIONS.**